


Before proceeding with this quick and easy installation guide, please read the entire VersaLaser Safety, Installation, Operation and Basic Maintenance Manual. It has important information regarding safety as well as the complete and proper setup of VersaLaser.

1

Remove VersaLaser from its protective packaging.


2

Place VersaLaser where you plan to operate it.

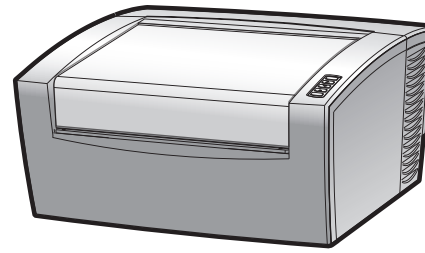


3

Connect **venting hose** to the vent opening on the rear side of the VersaLaser – the three-inch (3 in. or 7.6 cm) opening located at the bottom rear of the machine.

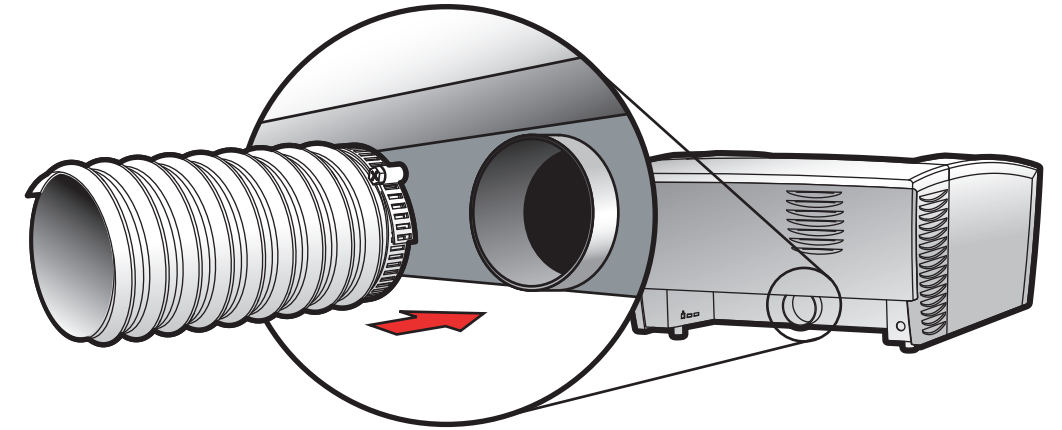

4

Connect the **power cable** supplied with the machine to the power connection at the back of the VersaLaser and plug it in to an appropriate power receptacle.

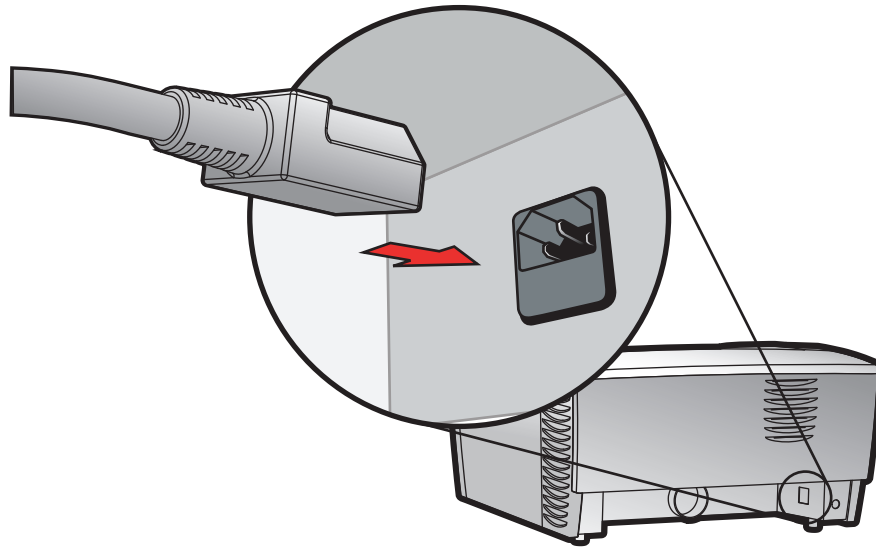


5

Turn on your computer to **boot up Windows® XP.**



6

Insert VersaLaser CD into your PC.

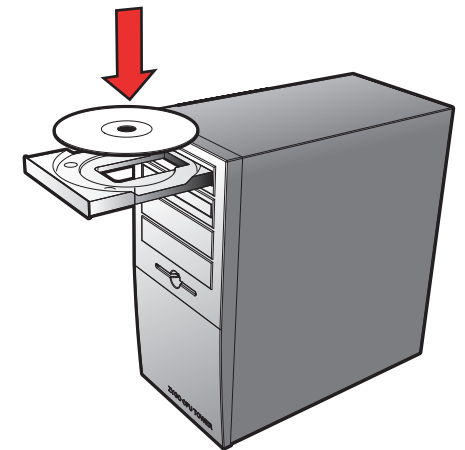

8

The VersaLaser installation software should automatically start at this point; follow the on-screen instructions. If it doesn't, then the "Found New Hardware Wizard" will appear. Simply click Next and follow the remaining on-screen instructions.



You are now ready to operate your VersaLaser!

Refer to the *Getting Started* booklet and use the enclosed materials to test run your first VersaLaser application!

7

Connect the **USB cable** supplied with the machine to the USB connection at the back of the VersaLaser. Connect the other end of the USB cable to the PC you plan to use with VersaLaser.

